

MK618 Operating Instructions




Use Instructions


Unlock

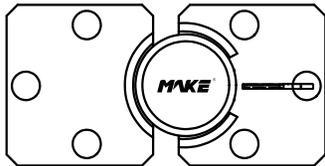


1. Insert the key into cylinder

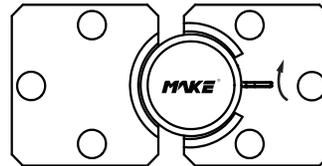

2. Rotate key 270 degrees clockwise

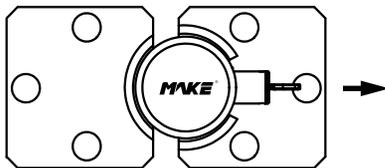


3. Slide the cylinder out

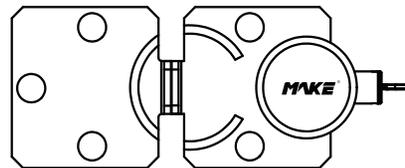


4. Remove the puck lock


Lock

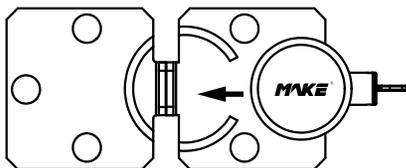


1. Position puck lock into the hasp

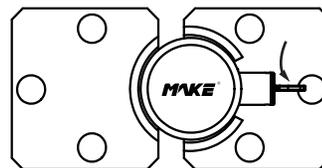

2. Rotate key 270 degrees anticlockwise and remove the key

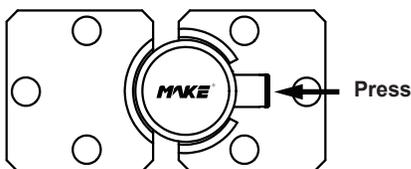


3. Press the cylinder to lock

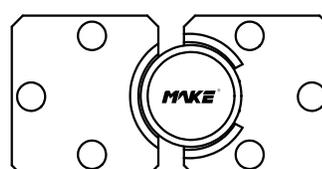


4. Locked successfully

Installation Instructions

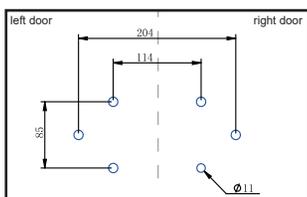


1. Make the mounting holes

FRONT VIEW

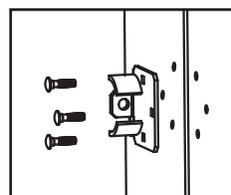


2. Fix the right base into the door

REAR VIEW

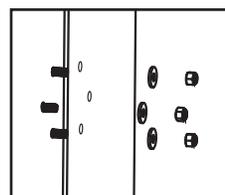

3. Tighten up the nuts clockwise until locked tightly

FRONT VIEW

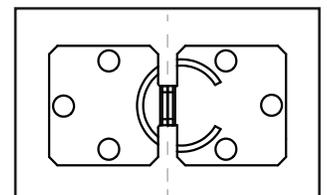

4. Take the same as per 2&3 to fix the left base